

Please note the following changes to the *User's Manual* with the release of the latest camera firmware (version A 2.00/B 2.00).

Note: To get the most from the latest D3 firmware, update the supplied ViewNX and Capture NX software respectively to versions 1.0.4 or later and 1.3.3 or later. Capture NX 2 can be used as is.

The Playback Menu

Rotate Tall (*User's Manual*, pg. 287; *Quick Guide*, pg. 26)

Because the camera itself is already in the appropriate orientation during shooting, images are not rotated automatically during image review, even when [On] is selected for [Rotate tall].

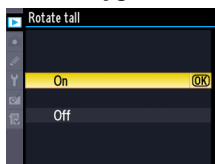 


Image Review

 
To view images in the monitor after shooting using image review, select [On] for the [Image review] option in the playback menu.

The Custom Setting Menu

f4: Assign FUNC. Button

(*User's Manual*, pg. 334; *Quick Guide*, pg. 24)

The following changes and additions have been made to the "button + dials" options for Custom Settings f4 ([Assign FUNC. button]), f5 ([Assign preview button]), and f6 ([Assign AE-L/AF-L button]):

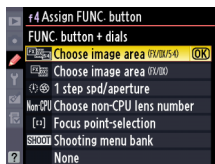

- [Choose image area] has been divided into [Choose image area (FX/DX/5:4)] and [Choose image area (FX/DX)] options. Select [Choose image area (FX/DX/5:4)] to choose the image area by pressing the button and rotating a command dial, [Choose image area (FX/DX)] to switch between FX and DX formats by pressing the button and rotating a command dial. If either option is selected, the current image area will be shown in the viewfinder, top control panel, and shooting information display while the button is pressed. FX format is shown as "36×24", DX format as "24×16", and 5:4 as "30×24" (in the viewfinder, "x" is replaced by "-"; e.g., "30 - 24").
- A [Shooting menu bank] option has been added. If this option is selected, the shooting menu bank can be selected by pressing the button and rotating a command dial.

The Setup Menu

Copyright Information

A [Copyright information] option has been added to the setup menu. To enter a photographer or copyright holder name, select [Artist] or [Copyright] and follow the instructions on page 292 of the *User's Manual*. Photographer names can be up to 36 characters long, copyright holder names up to 54 characters long. To attach this information to all subsequent photographs, highlight [Attach copyright information] and press ► to place a check (☑) in the box. To save changes and exit, highlight [Done] and press Ⓞ. Copyright information is displayed on the fourth page of the photo information display.



 
Copyright Information

To prevent unauthorized use of the artist or copyright holder names, make sure that [Attach copyright information] is not selected and that the [Artist] and [Copyright] fields are blank before lending or transferring the camera to another person. Nikon does not accept liability for any damages or disputes arising from the use of the [Copyright information] option.

My Menu

(*User's Manual*, pg. 373; *Quick Guide*, pg. 40)

Recent settings can now be displayed in place of My Menu. To display the 20 most recently used settings, highlight [Choose tab] in [My Menu] and press ►, then highlight [Recent settings] and press Ⓞ. Menu items will be added to the top of the recent settings menu in the order they are used. To view My Menu again, select [My Menu] for [Recent settings] > [Choose tab].

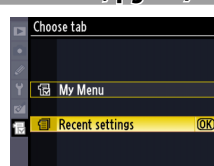

Live View

Displaying a Virtual Horizon (*User's Manual*, pg. 101)

To display a virtual horizon in live view mode, press the **Info** button. This display can be used to help level the camera. The virtual horizon is not displayed while the view through the lens is zoomed in.

