

OCTOBER 19, 2020

**Nikon** | LEARN &  
EXPLORE

BEGINNER

# Using the 2 Button Reset Feature on Nikon DSLR Cameras

Nikon DSLR cameras have a 2 button reset feature that lets you reset the camera's settings back to the factory defaults.

This is a great feature if you share a camera body and want to make sure all settings are back to their defaults. Its also helpful when you get a brand new camera and play around with the various settings and options but want to know that you can reset everything back to the defaults and begin fresh.

Simply press and hold the 2 buttons denoted by the green dots [Check your camera's manual to see where on your specific camera body the buttons are placed] and hold until the control panel blinks.