

NOVEMBER 28, 2020

**Nikon** | LEARN & EXPLORE

INTERMEDIATE



# Wi-Fi Connectivity Guide for KeyMission 360/170

For iOS Users Only when using the SnapBridge 360/170 app and prompted to connect to Wi-Fi


IMPORTANT SUPPLEMENTAL INFORMATION CONNECTING TO THE CAMERA'S WI-FI

Step 1: After pressing GO you will be directed to the next screen


Step 2: Click on settings to go to Wi-Fi settings

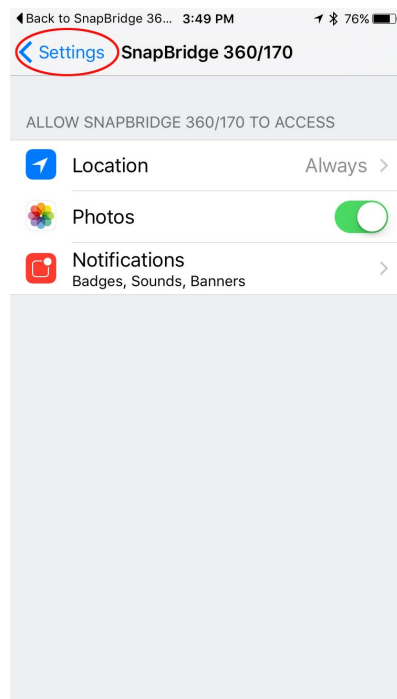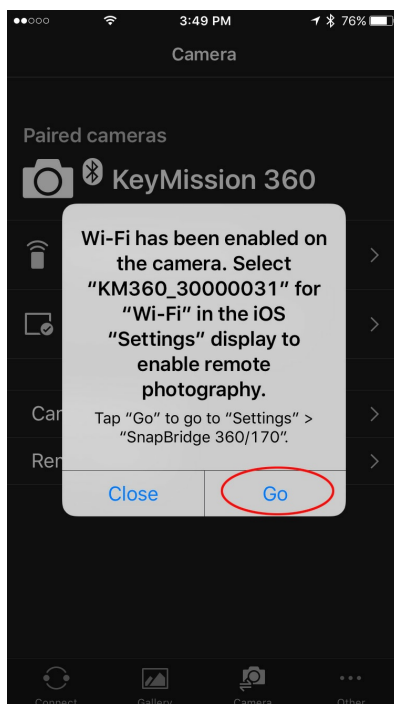


### Step 3: Select Wi-Fi

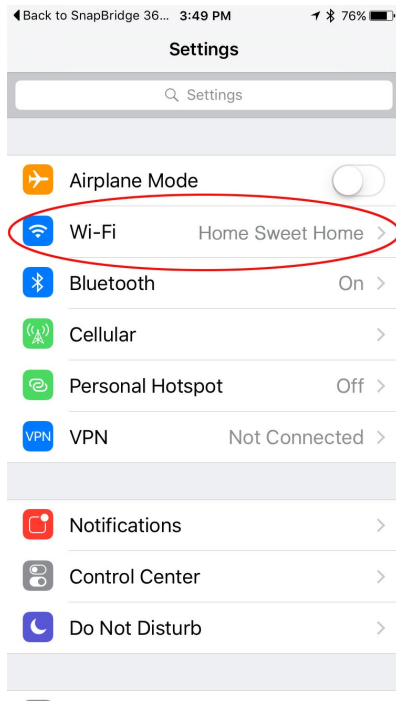

### Step 4: Select your KeyMission camera

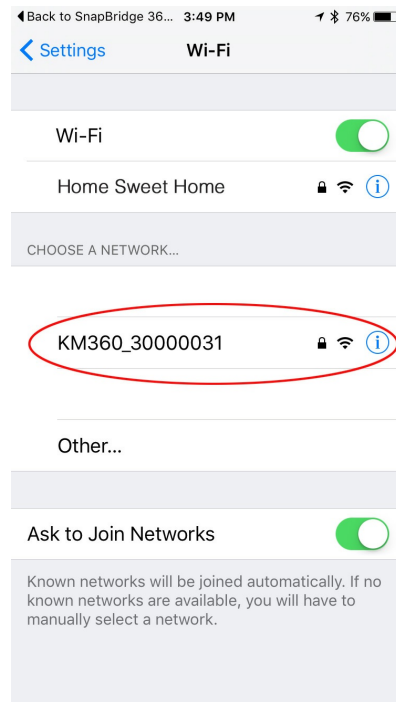

### Step 5: Enter default password **NikonKeyMission** (it is case sensitive)

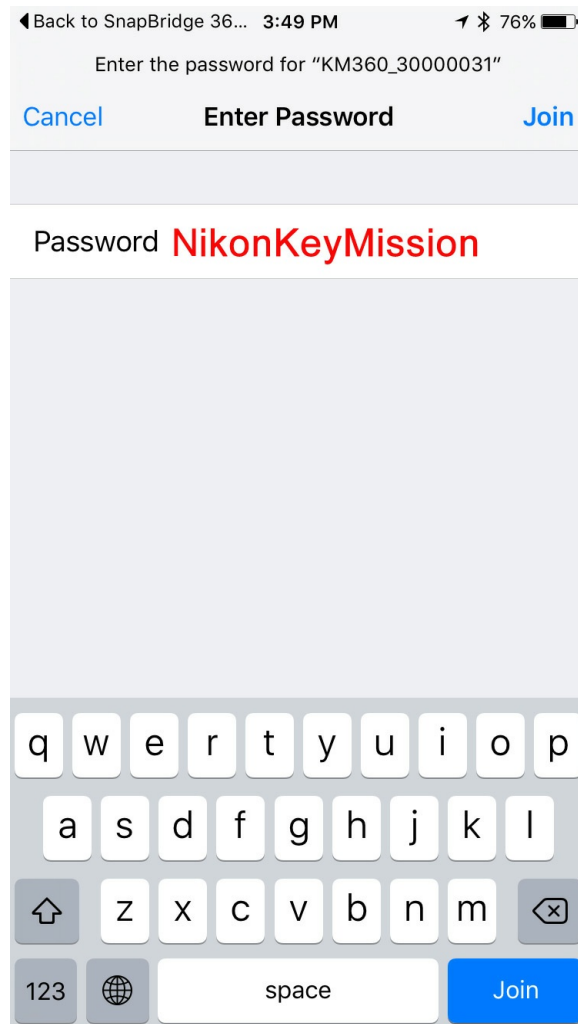

We recommend that you change the password to a personal one. To do so, within the app, go to: Camera Settings > Network Menu > Wi-Fi > Network Settings.

**IMPORTANT:** Connecting the KeyMission 360 and 170 cameras to the SnapBridge 360/170 app. For complete set up information, refer to the Quick Start Guide included with your camera as well as the reference manual which can be downloaded at <http://downloadcenter.nikonimglib.com>.

This issue is only with iOS devices. Android users will not encounter this issue.